


CALIBRATION AND SET-UP

- Firstly prime the pump by rotating the twist switch to 'PRIME'. This will ensure no air is present
- Press counter reset button as indicated above, to zero the counter
- Again using the 'PRIME' function, discharge the volume required
- The counter will indicate the number of strokes used
- Press and hold the set point adjust lever as indicated above
- Set the lower display to the same number as the top display using the dedicated levers
- The batcher is now set
- To dispense a batch set the twist switch to 'BATCH' and press the 'START' button

Filling the integral container using the pump

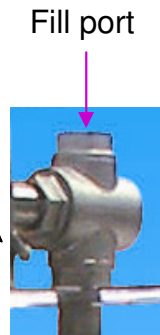

Connect the bulk chemical storage to the fill port. Position the manual valve lever in the up position to use the pump to fill the integral tank